


Available for Comfort-2 Eco/Flex; Comfort-3 Flex/Scale; Comfort-4 Eco/Battery/Plus

Removing the Footrest

Digiterand the sequence of the sequence of



1. STEP Grip the footrest as shown in the picture

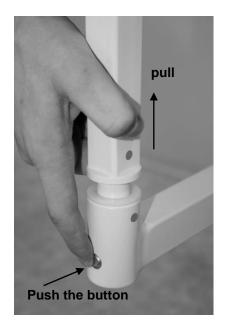

2. STEP Simultaneously push the button and pull the footrest upwards



3. STEP Remove the footrest from the frame


Installing the Footrest



1. STEP Place the footrest connecting-pins in the holes on the frame



2. STEP Push the Footrest in the frame by hands

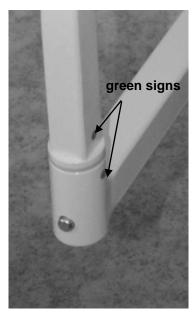

ATTENTION!!! The green signs must be on the same side!